

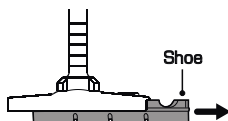
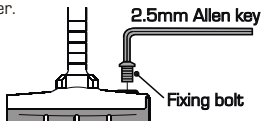




1. Remove the fixing bolt. Remove the shoe by sliding it along the groove of the shoe holder.

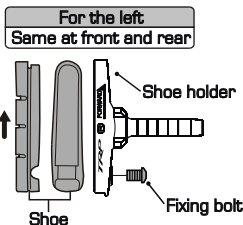



2. There are two different types of shoe and shoe holder to be used in the left and right positions respectively. Slide the new shoes into the grooves on the shoe holders while taking note of the correct directions and bolt hole positions.

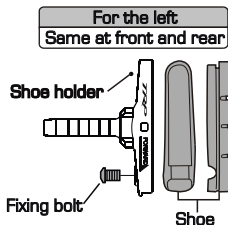

3. Use a 5mm Allen Wrench to hold the shoe fixing bolt while tightening the fixing nut using a 13mm spanner.

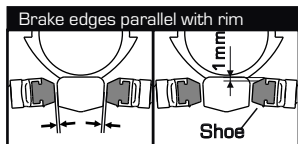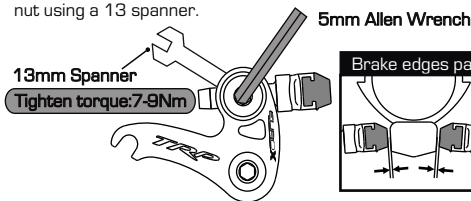

4. Loosen the bolt in the end of the brake pad post using 4mm allen wrench. Adjust the pad toe in and retighten the bolt.

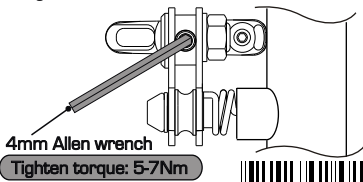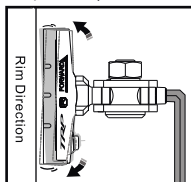

TRP
ADVANCED BRAKING SYSTEMS

Website: www.trpbrakes.com
E-mail: info@trpbrakes.com

650 Castro St Suite 120-200 Mountain View, CA 94041

